
InSb Detectors

TECHNICAL DATA&INFORMATION

The photovoltaic **Indium Antimonide** detectors offered by **InfraRed Associates**, **Inc.** are p-n junctions formed by mesa techniques using single crystal material. This process yields the highest quality photodiodes which exhibit excellent electro-optical performance in the 1µm to 5.5µm wavelength region. These diodes are background

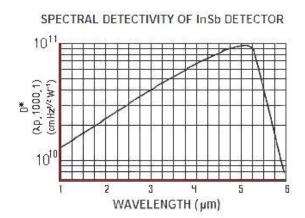

limited (BLIP) detectors and their performance can be enhanced by spatial (cooled FOV stops) or spectral (cooled interference filters) reduction of the background.




Typical Applications:

- Medical Thermography
- Thermal Imaging
- Spectroscopy
- Radiometry
- o Research
- o IR Microscopy

The photovoltaic effect is the generation of a potential across the p-n junction when radiation of the proper wavelength is incident upon it. When the photon flux irradiates the junction, electron-hole pairs are formed if the photon energy exceeds the forbidden gap energy.

The field sweeps the electrons from the p region to the n region, and holes from the n region to the p region. This process makes the p region positive and the n region negative, and will produce current flow in an external circuit. An equivalent circuit of the InSb detector is represented below. This consists of both a signal and noise current generator in parallel with a resistive and capacitive term.

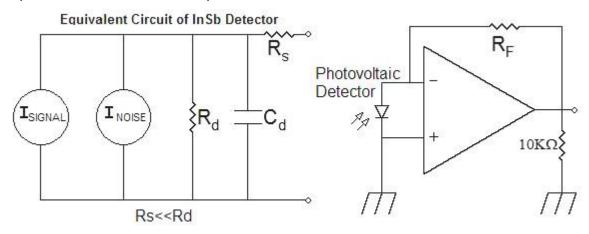

When background radiation shifts the operation curve by generating a constant output in the active element, the detector should be reversed-biased to bring it back to the optimum operating point: zero voltage.

This can be achieved by utilizing a matched preamplifier such as our <u>IAP-1000IS</u>. The detector preamplifier system operates in the detector noise limited mode. A dual output supply is required.

Standard Photovoltaic Indium Antimonide Detectors

Mod	FOV=60°, (λpk,1000,1)								Std.	Std.
el	Active	D*	Respon	Resistanc	Capacitanc	Shor	Open	Opera	Pkg.	Wind
Num	Area		sivity	e (Rd)	e (Cd)	t	Circu	ting		ow
ber	Element	(cmHz ^{1/}				Circ	it	Temp.		
	(mm)	² W ⁻¹)	(λp)	(Ω)	(pF)	uit	Volta			
						Curr	ge	(K)		
						ent	Vcc (
						lsc (mV)			
						μΑ)				
IS-0.	q.25/.25x	≥ 1.0E1	≥ 3 A/W	1000K	70	0.9	80	77	MSL-	Sapp
25	.25	1					to		8	hire
IS-0.	q.5/.5x.5			500K	100	2	125		MSL-	
5									12	
IS-1.	q1/1x1			300K	350	8			or	
0									MDL-	
IS-2.	q2/2x2			100K	1500	30			8	
0									MDL-	
									12	

MSL-8 Side Looking Metal Dewar---8 Hour Hold Time

MSL-12 Side Looking

Metal Dewar---12 Hour Hold Time

MDL-8 Down Looking Metal Dewar---8 Hour Hold Time

MDL-12 Down Looking

Metal Dewar---12 Hour Hold Time

Custom configurations and arrays designed to customer specifications are available. In addition, custom metal and glass dewars designed to function with various cooling techniques can be supplied. <u>Contact us</u> to discuss your specific requirements.